bouncepad

EDDY

Assembly Instructions

No Tools Required for Basic Setup


Tools Required to Fix From Above:


- 4mm Drill Bit • Drill
- Pencil PZ2 Screwdriver


Tools Required to Fix From Below:

- 5mm Drill Bit Drill
- Pencil
- BP-IM-060_REV1 Sheet Code: Release Date: 22/06/2020

Copyright 2020 Spotspot Ltd. (T/A Bouncepad) all rights reserved. Confidential, no part of this publication may be reproduced or transmitted in any form without the written permission of the copyright holder.

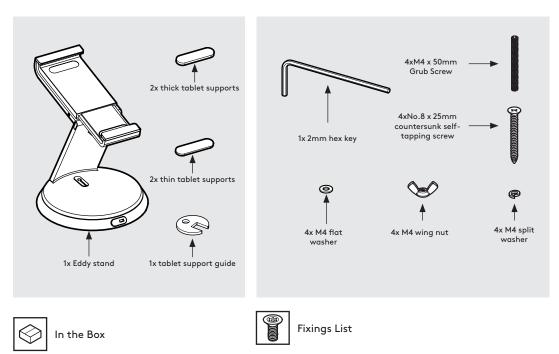

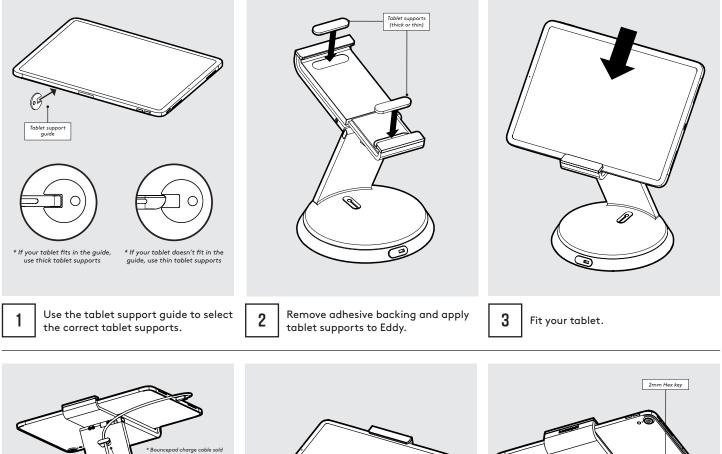

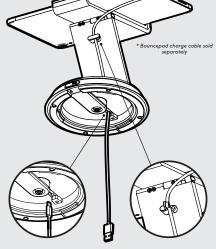

Feed your charge cable through the base and plug it into your tablet. Use the rubber hooks to keep it tidy.


4

Basic setup is now complete. Continue with Steps 6 and onwards to add security features.

5

Turn clockwise Intil finger tight Use the 2mm hex key to secure your 6


tablet to Eddy.

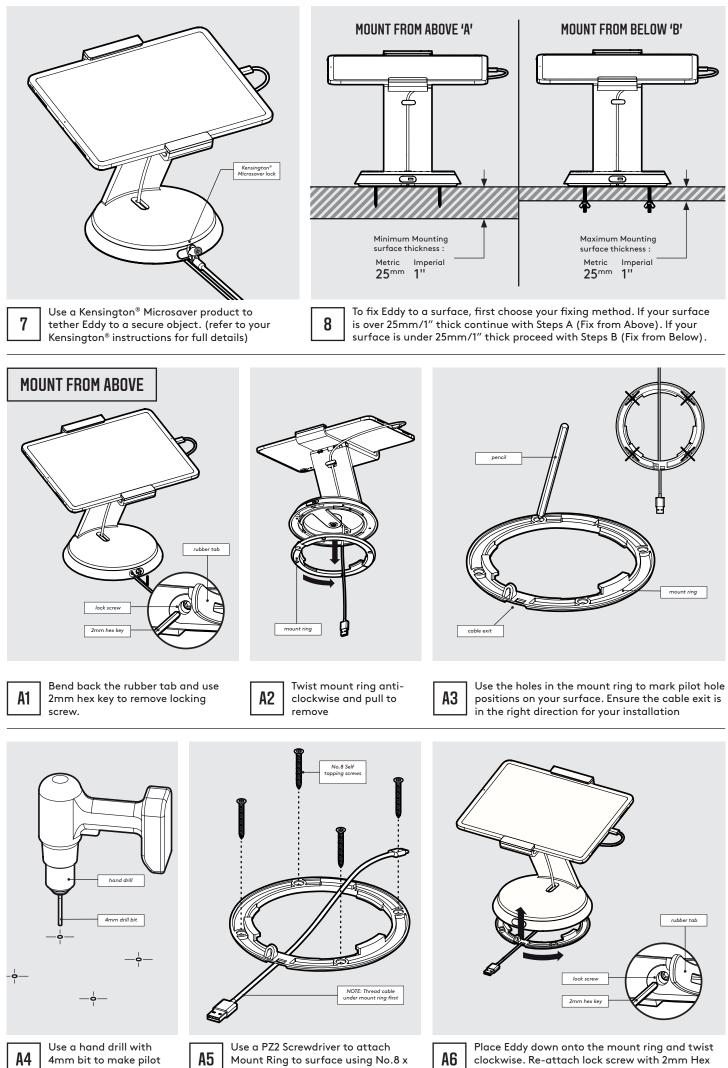

4mm bit to make pilot holes in your surface.

Mount Ring to surface using No.8 x 25mm countersunk screws

clockwise. Re-attach lock screw with 2mm Hex key. Eddy is now securely attached to your surface

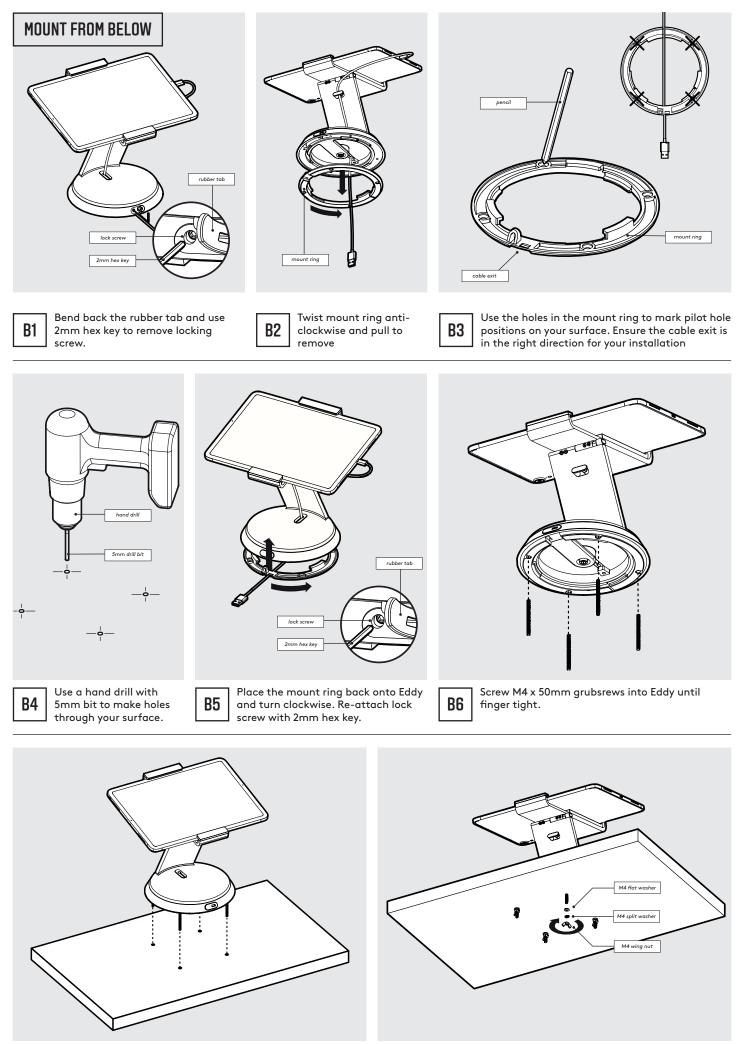

B8

Place Eddy onto your surface with grubscrews passing through the pre-drilled holes

B7

Attach illustrated washers and tighten wingnuts by hand. Eddy is now securely attached to your surface.