

IDISPLAY

 


Desktop Stand Kiosk


Installation Manual




Package contents

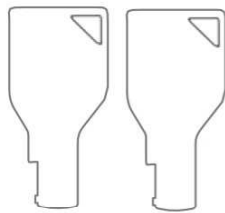


2 x Keys

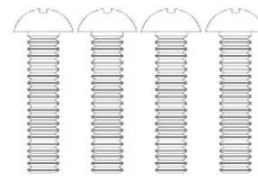 


4x Bolts

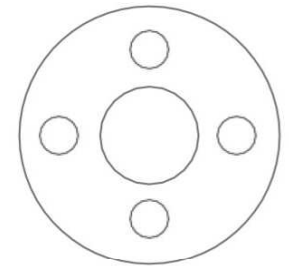 


1x Mounting Washer

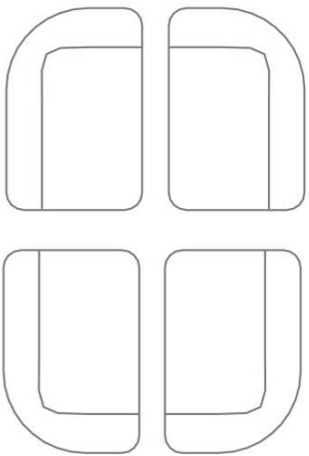 


Fit Kit

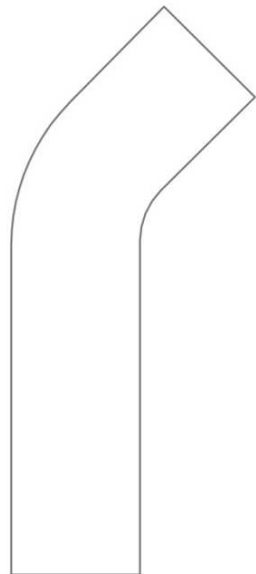 


Stem

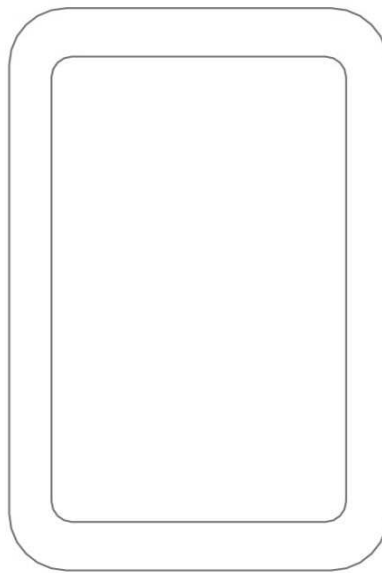 

Face Plate

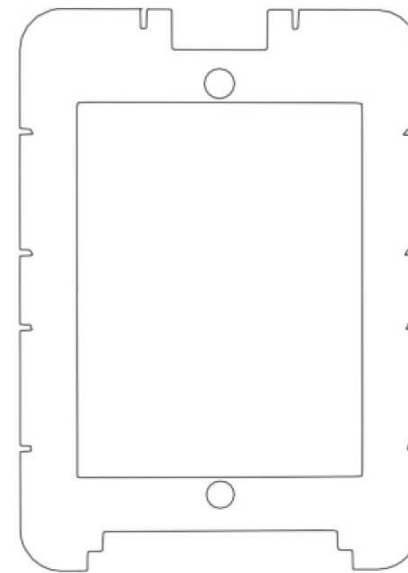 

Access Cover

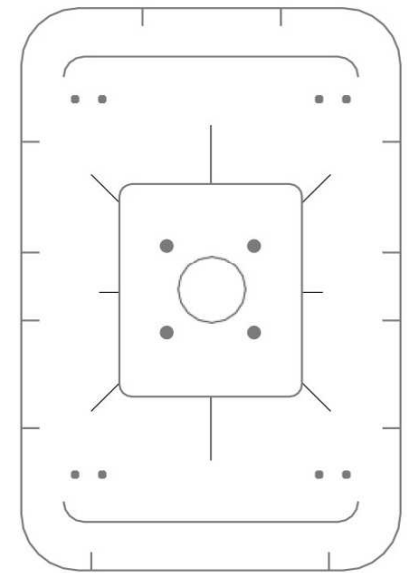 

Case

 
Please Note: If you purchased any of our upgrade options, those additional parts are not listed above.

Recommended Positioning

30° Stem




45° Stem

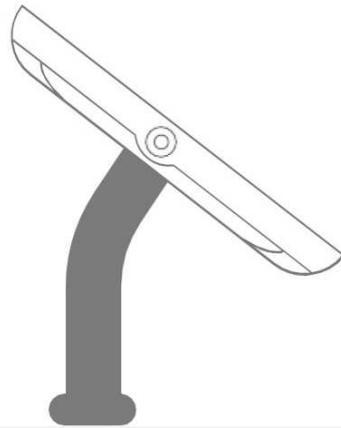


75cm – 90 cm

60° Stem

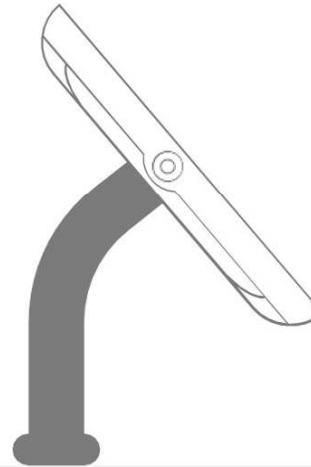


Flex Stem

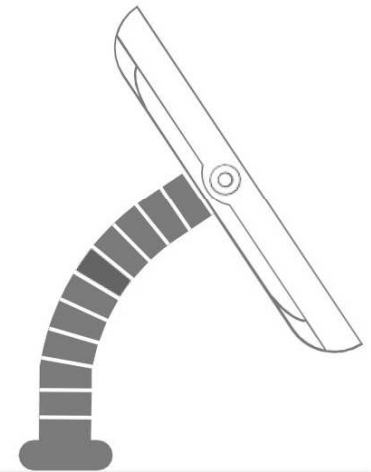

90 cm – 110 cm

Installation Options

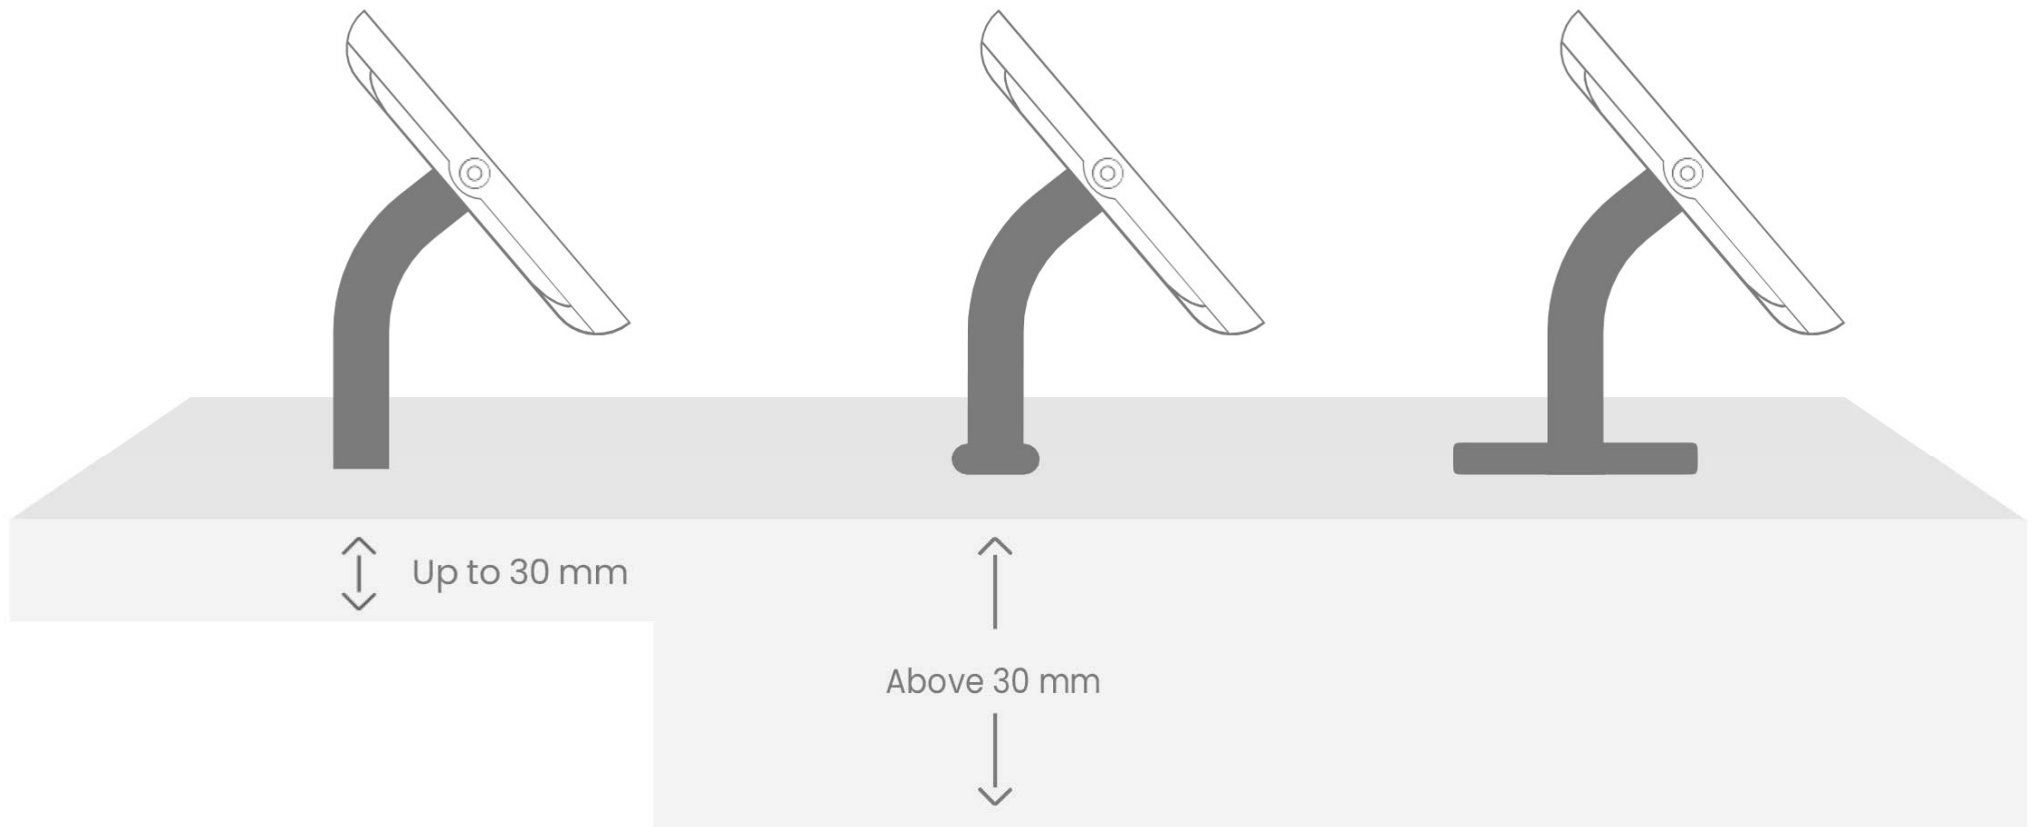

Under Counter

Requires drill holes and access beneath the mounting surface to create a seamless finish.


Surface

Screw down into your surface to fix your kiosk to a desk or table with an option to route cable along the countertop when there is no access underneath.

Freestanding

No need to drill holes in your furniture. Our sturdy base with rubber feet ensures a non-slip grip onto any surface while allowing easy mobility.

Cable Routing Options

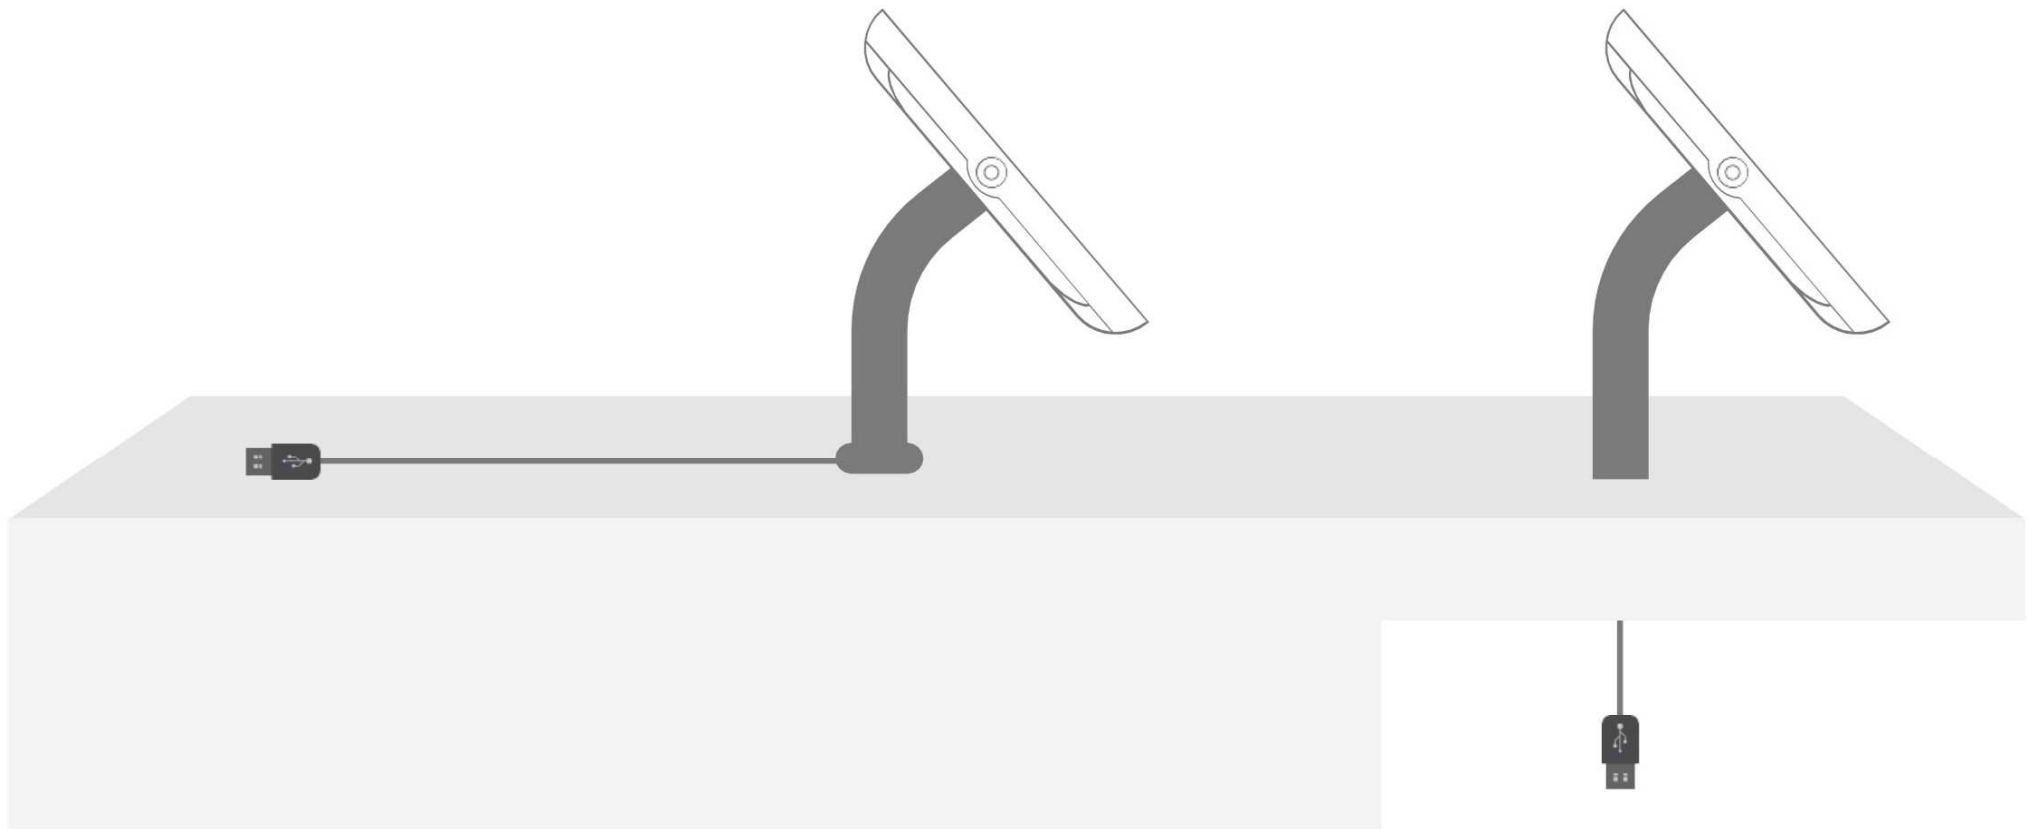

Option 1

The charge cable can exit out the back of the base.

Option 2


The charge cable can continue through the surface and exit underneath.

Switch Optional Upgrade: Landscape to Portrait

PLEASE NOTE: This is an optional upgrade. Please complete A and B below, then proceed to Step 2.
If you have not purchased this option, please proceed to assemble your kiosk starting at Step 1 (right).


A.

Attach the Switch to
the Stem.

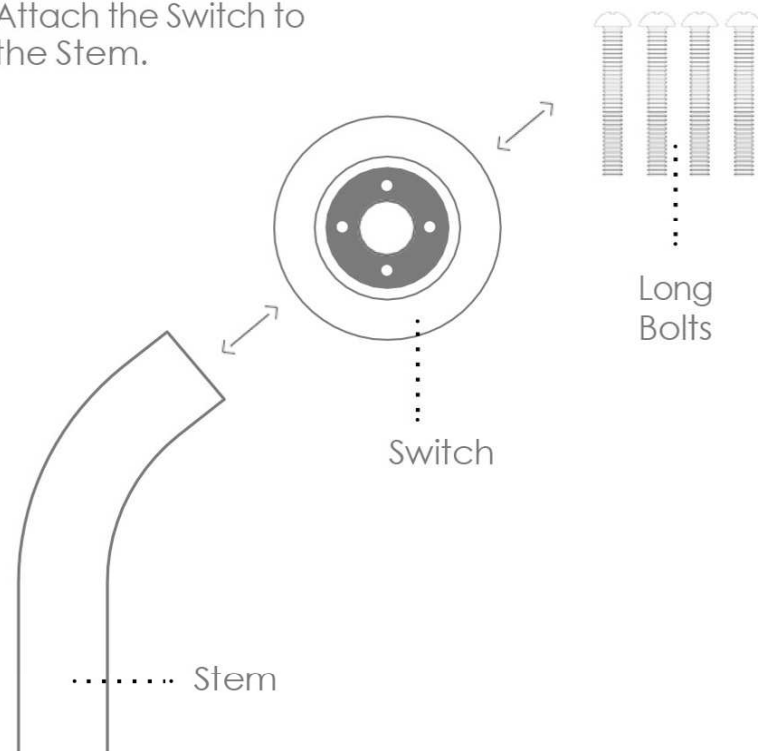


B.


You can now attach the Case
to the Stem.

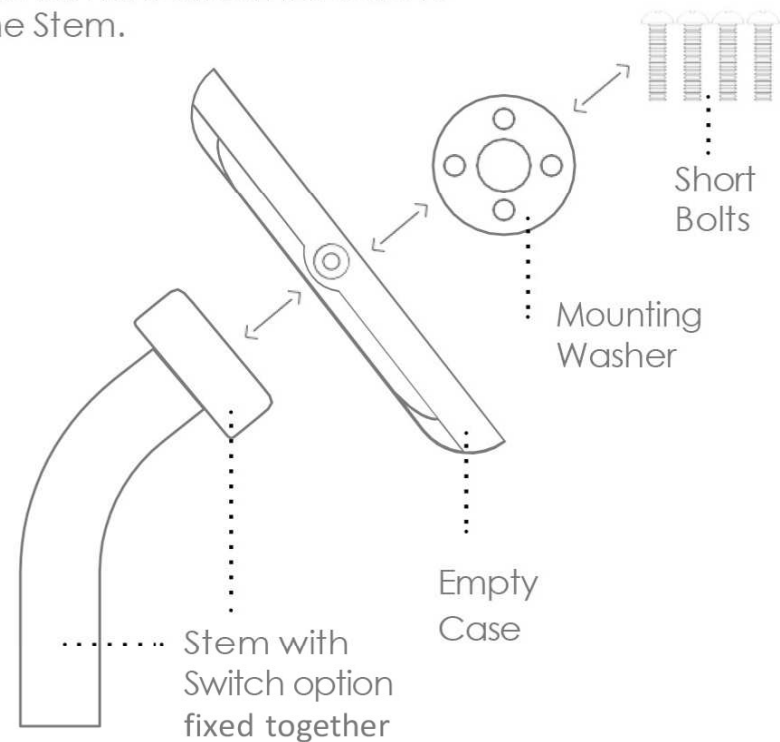

Fixed Stem

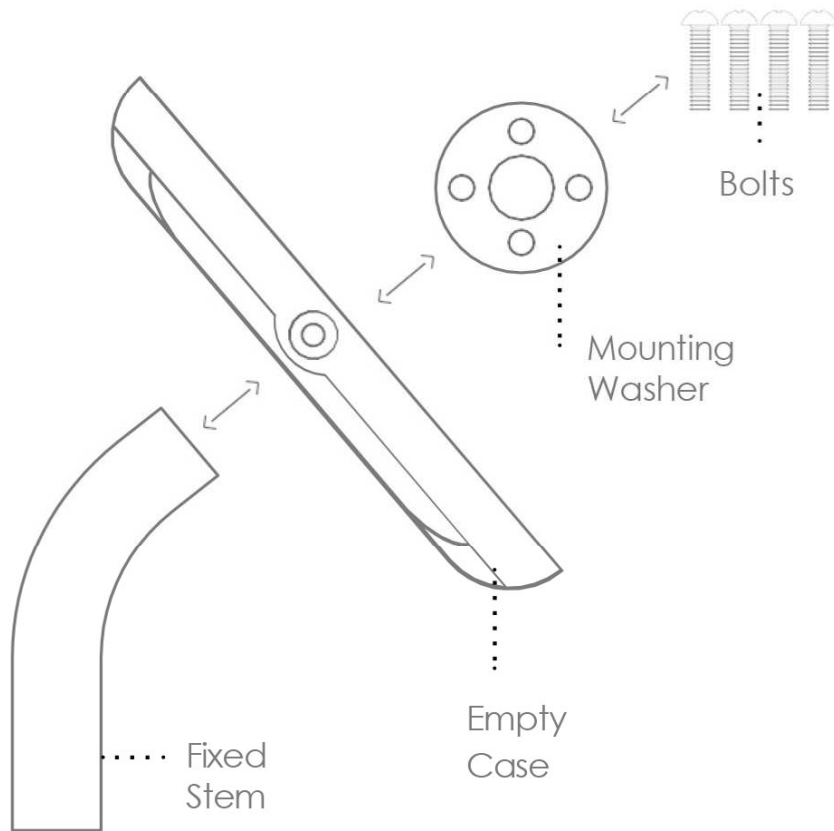


Flex Stem

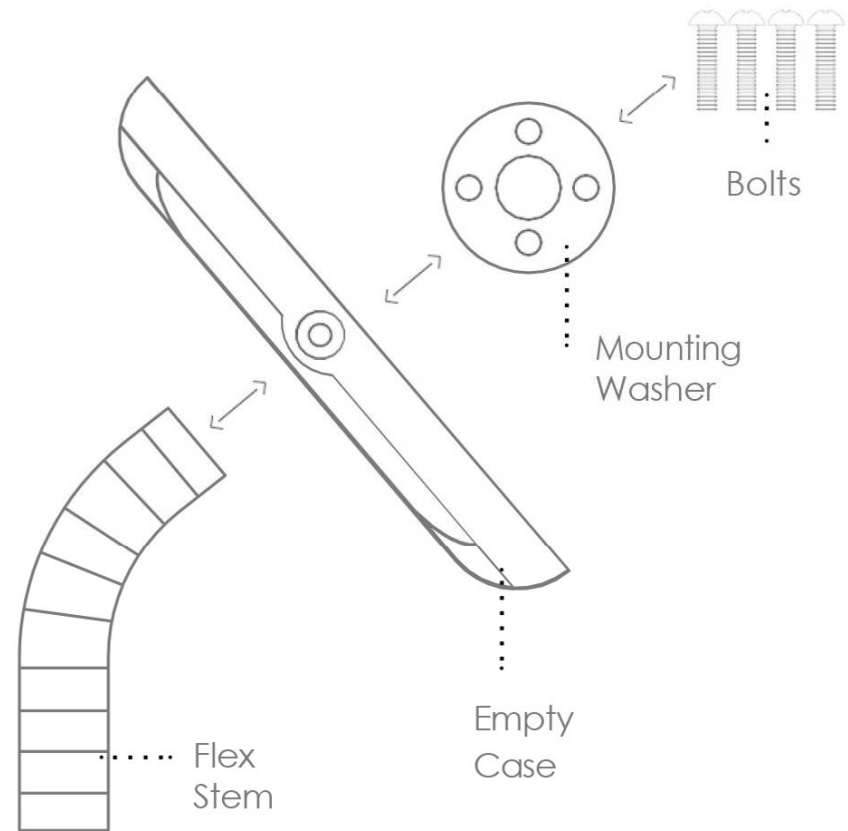


Attach the Case to the Stem by using the four bolts and the mounting washer to join together.

STEP 2 FIT KIT

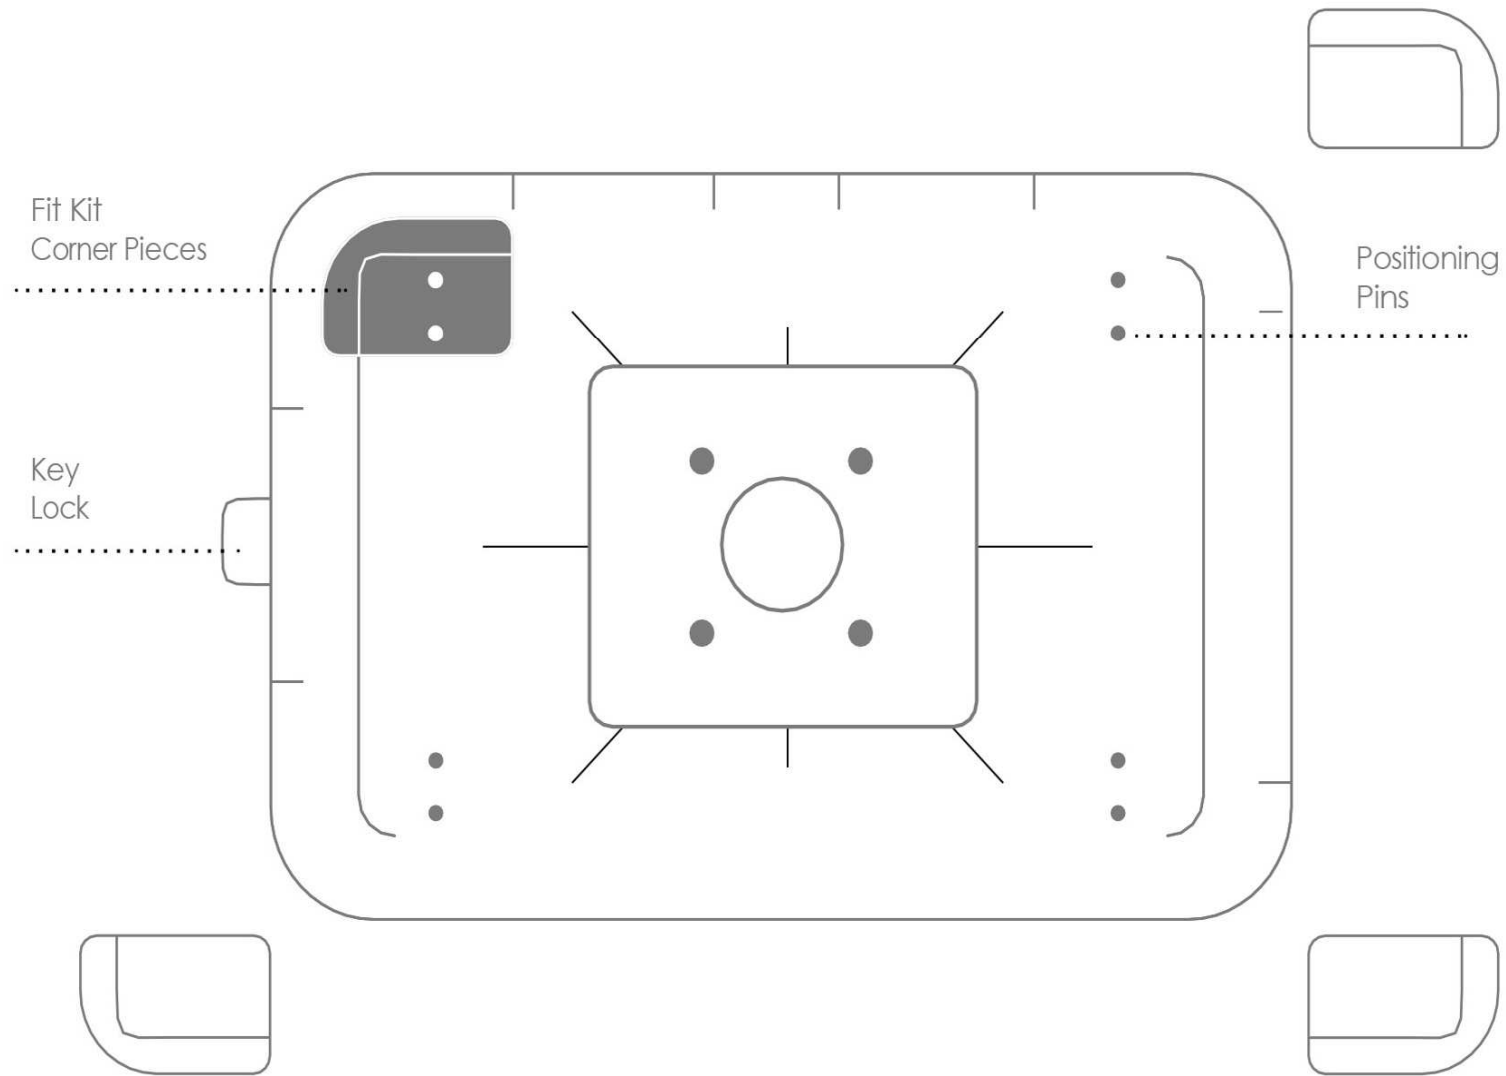

 
Firmly insert each of the four Fit Kit rubber corner pieces into the case by aligning with the Positioning Pins.

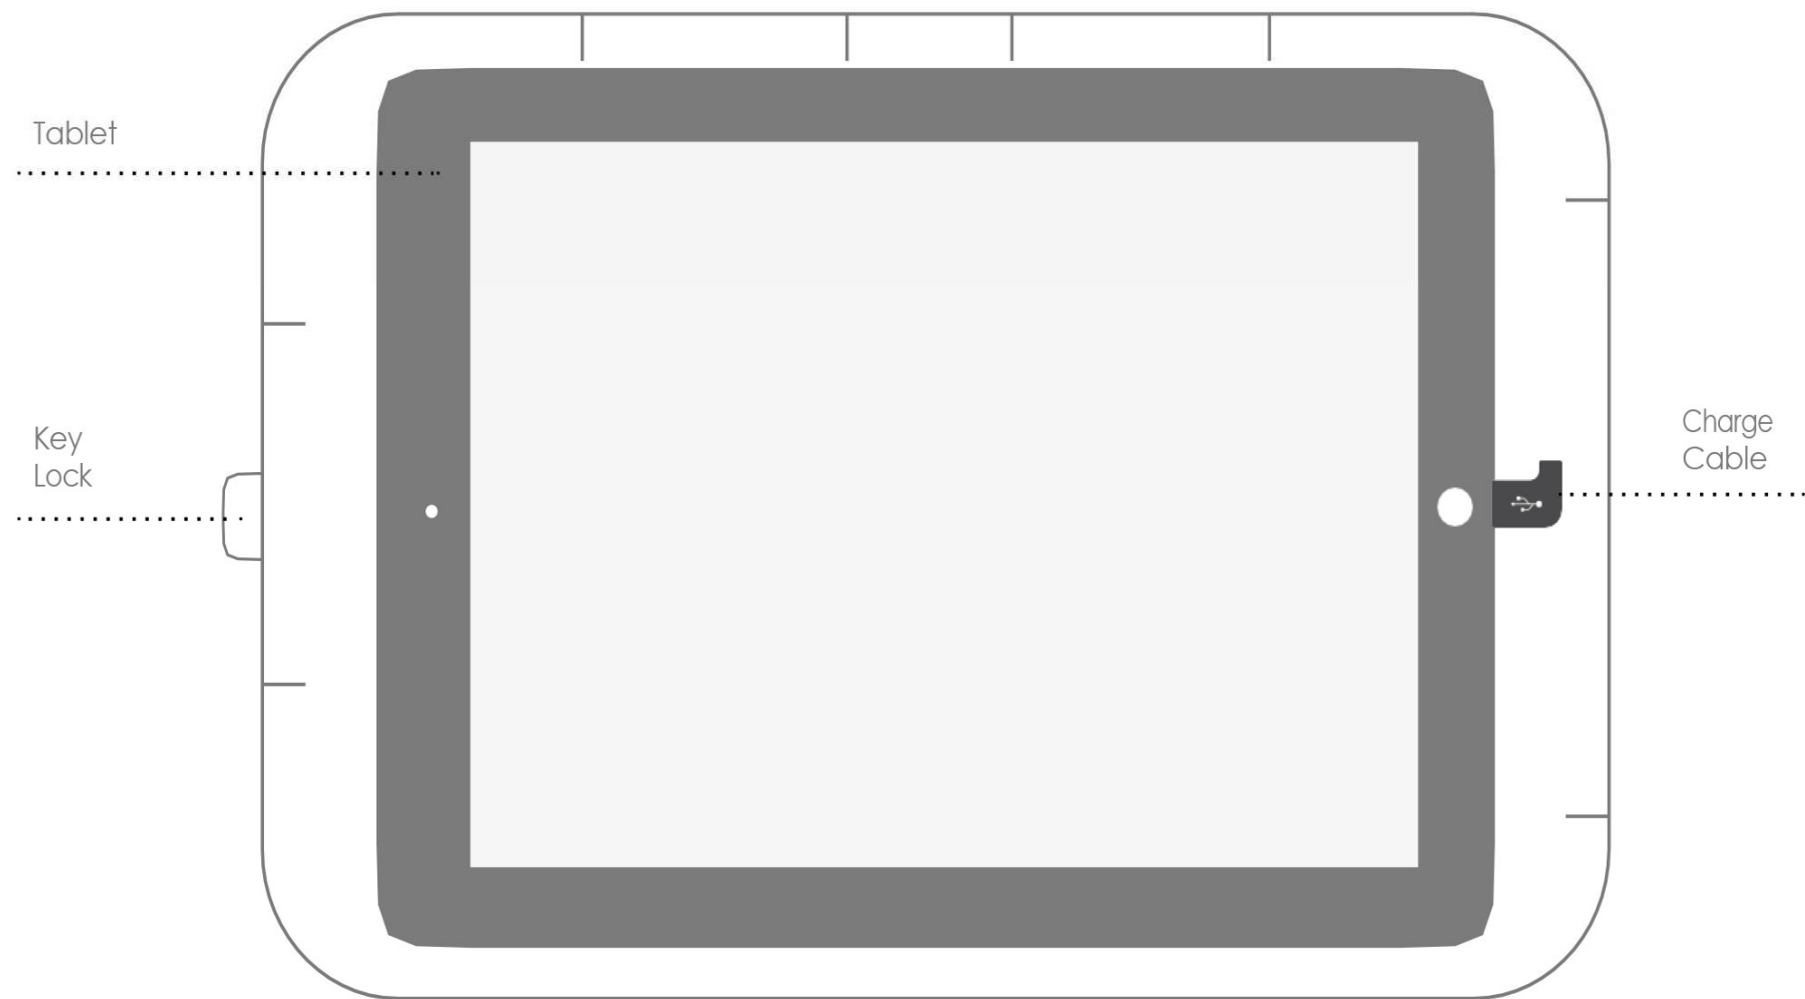


Connect the charge cable to the tablet, then insert your tablet into the Fit Kit corner pieces. It should sit neat and snug.

STEP 3 INSERT TABLET


STEP 4 ACCESS COVER

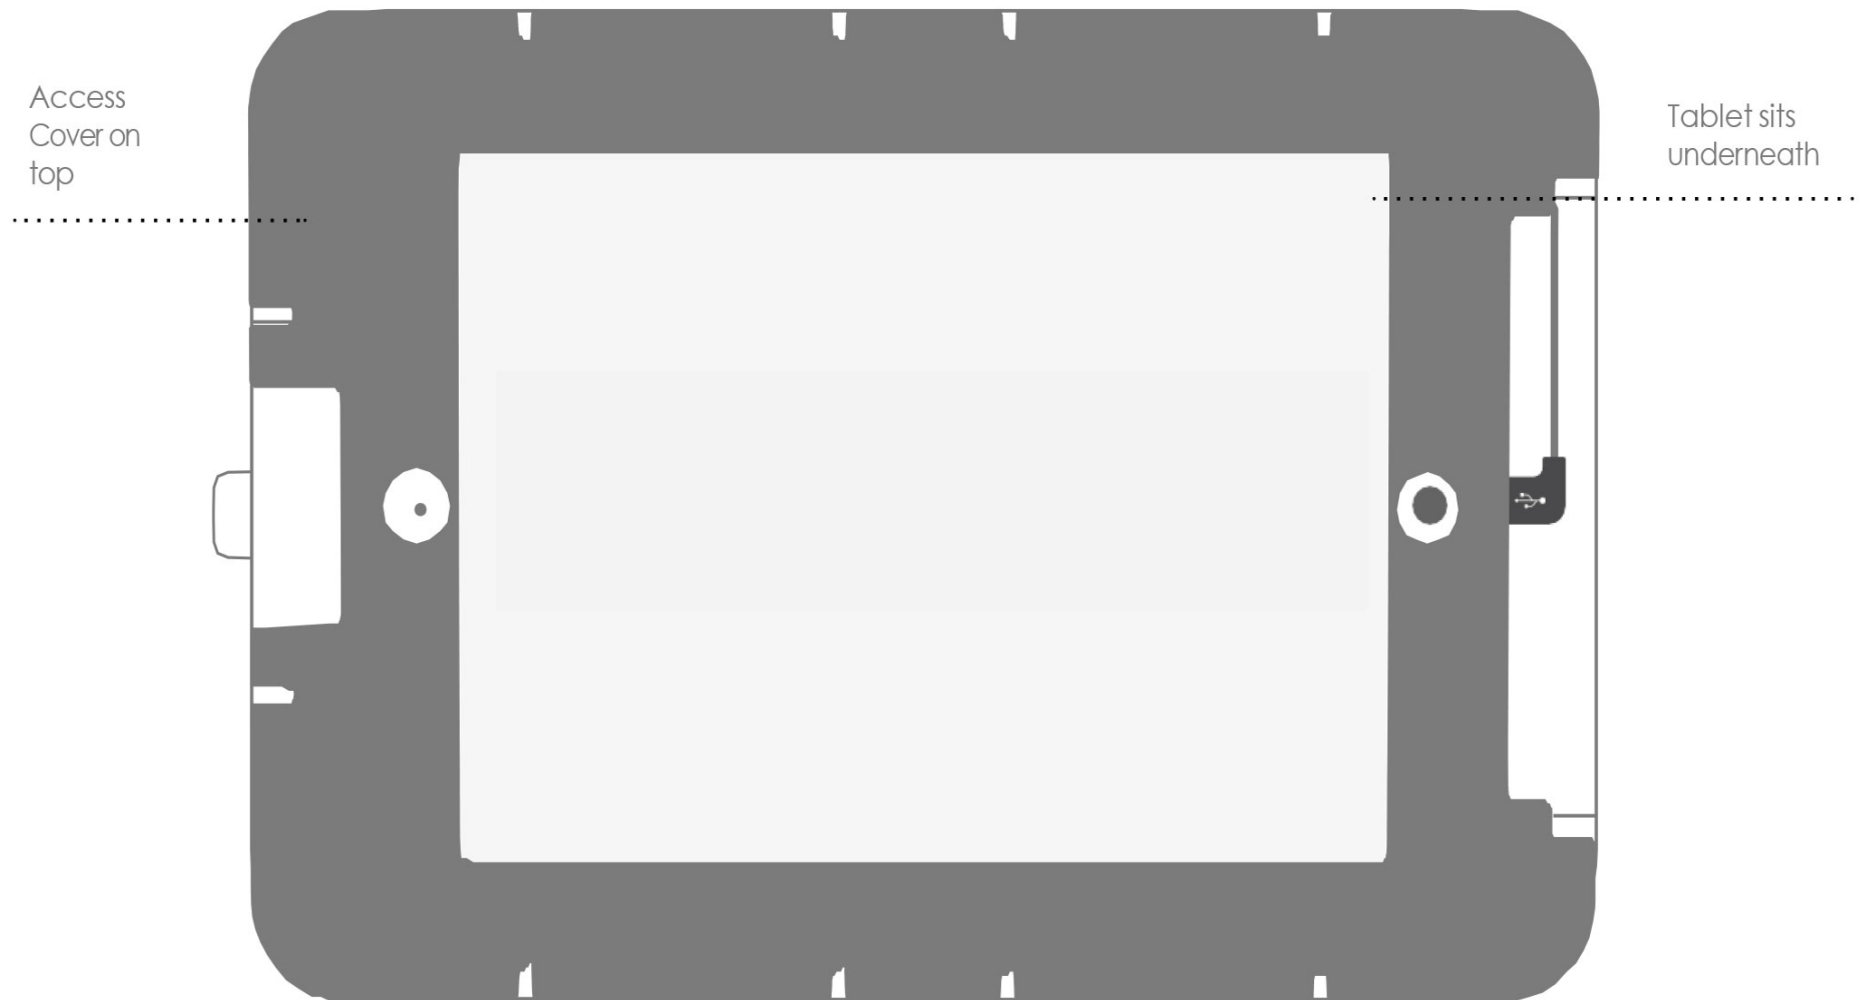

First, peel the brown protective seal from one side of the Access Cover. Then insert the Access Cover over the top of your tablet with the black, shiny side facing up. It should fit precisely, allowing user access to your tablet home button and front camera (options available for any combination of Open and Closed; home button and front camera).

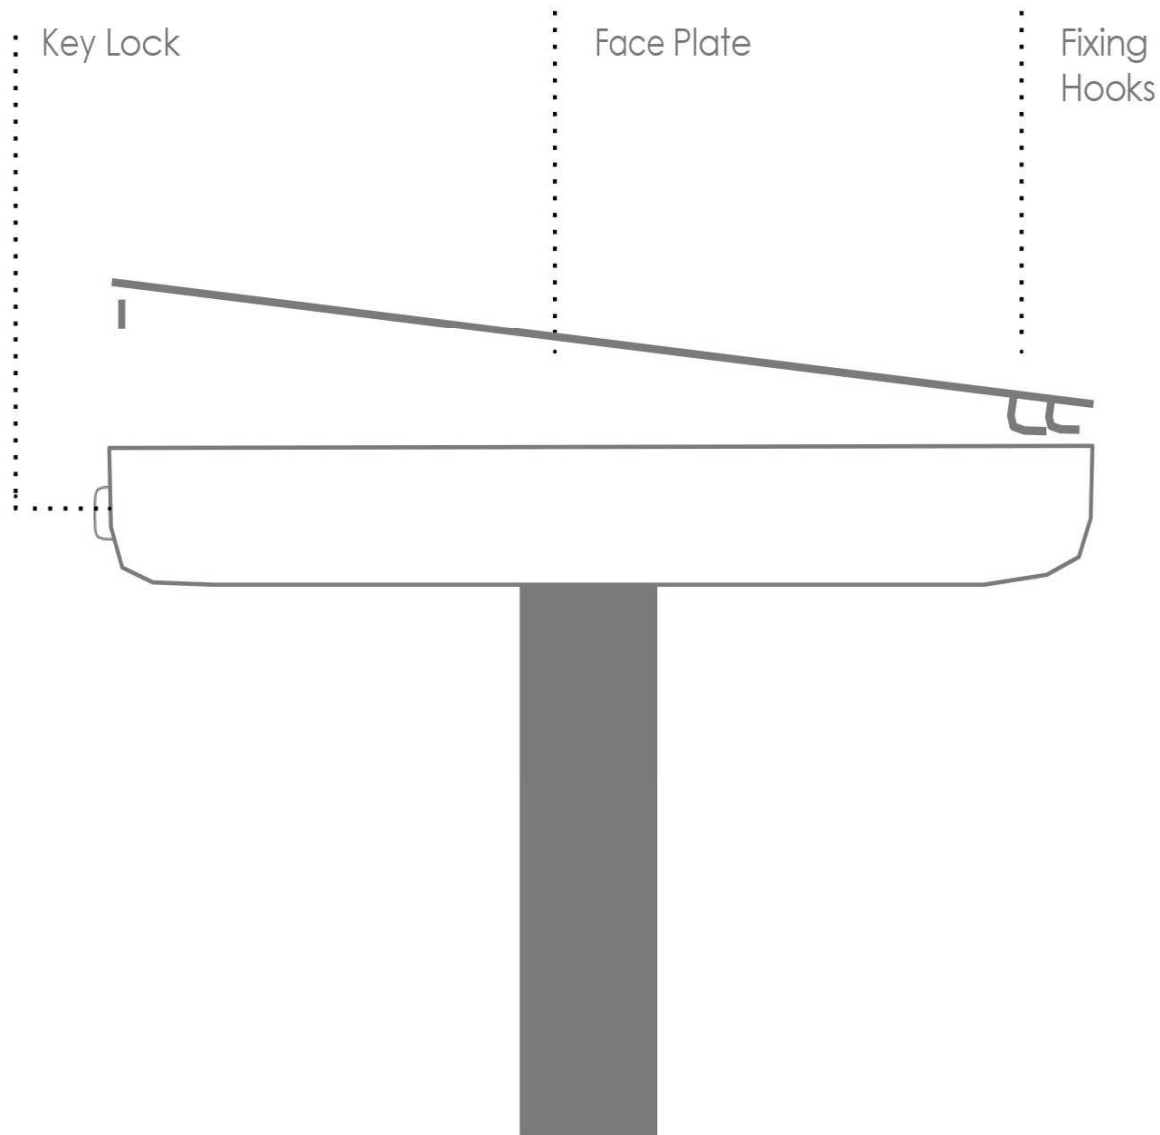

Example:

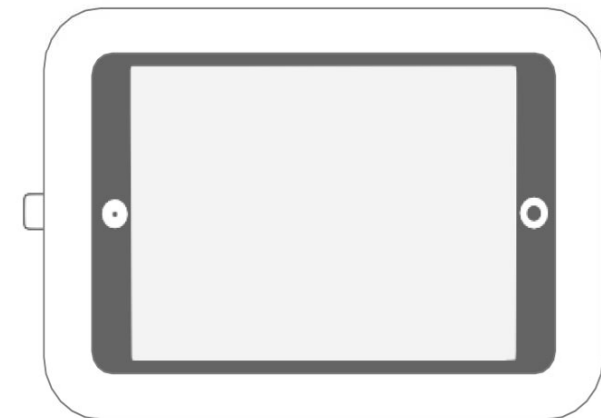


The last step is to lock-down the stainless steel Face Plate to secure and protect your tablet. First, position the two Fixing Hooks into the Case (opposite side of the Key Lock). Then pop in the other end. The Faceplate should click into the Case and sit flush.

STEP 6 PUSH TO LOCK

When the lock-pin stands out, it means your kiosk is open




To secure your kiosk, push in the lock-pin

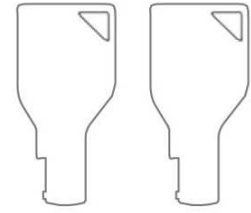


To complete the setup of your kiosk and ensure your device is secure, make sure to push in the lock-pin. To unlock use the 2 keys provided. More keys can be purchased from our website.

BOX INCLUSIONS

BASIC MOUNTING OPTION 1

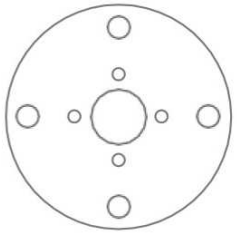


1x Base Plate

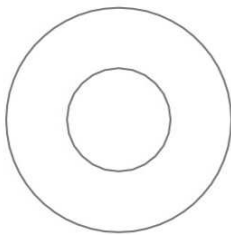


1x Base Cover



 4x Screws

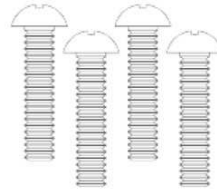


4x Bolts

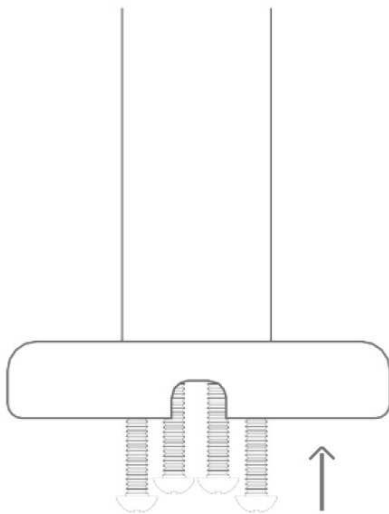 


STEP 1

 Connect the Base Plate to the Stem using the four bolts provided, tightening from underneath.

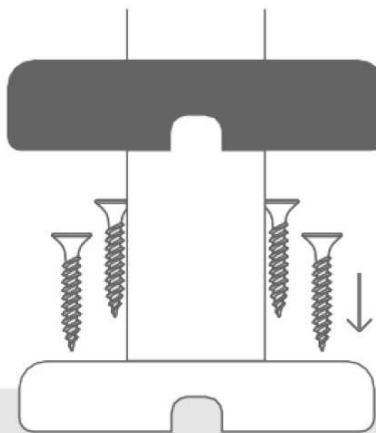

STEP 2

 Secure the Base Plate to your surface using the four screws.

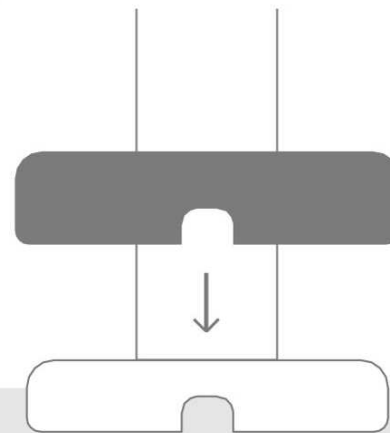

STEP 3

Line up the Base Cover to match the charge cable access hole.

 


STEP 4


Click the Base Cover down and over the Base Plate to finish.

BOX INCLUSIONS


BASIC MOUNTING OPTION 2

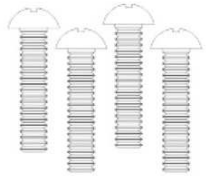


4x Bolts

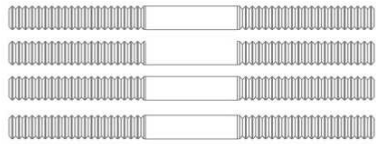 


4x Bolt Rods

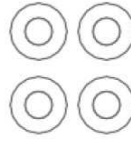 




4x Washers

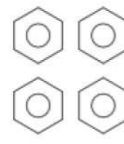 

4x Nuts

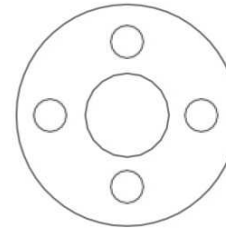 


1x Mounting Washer

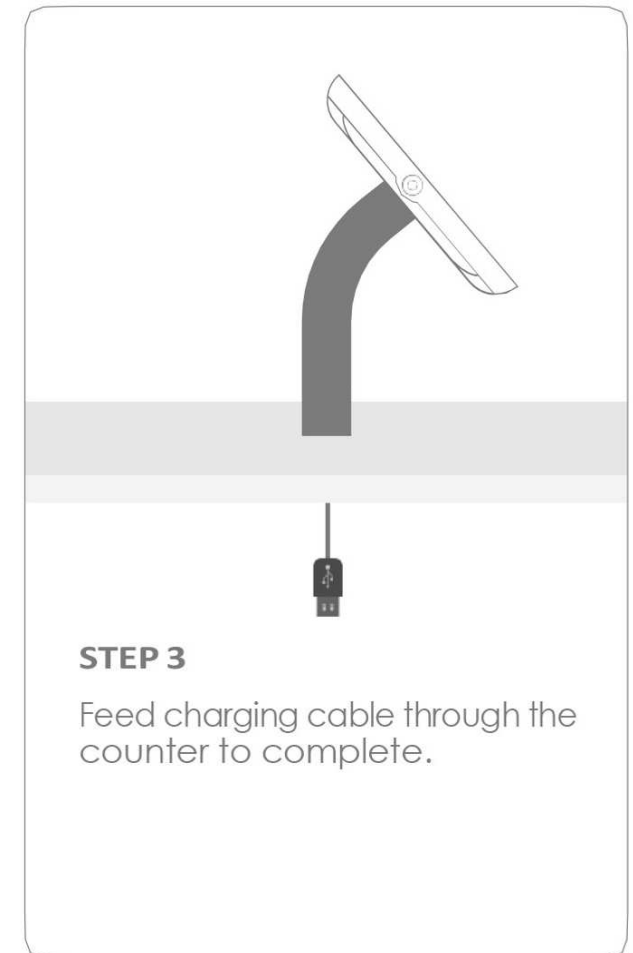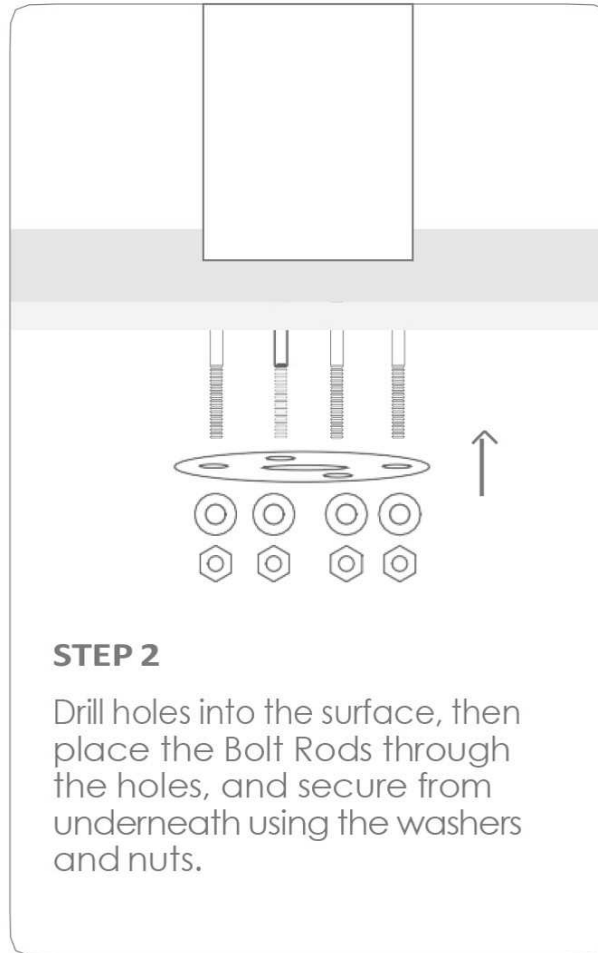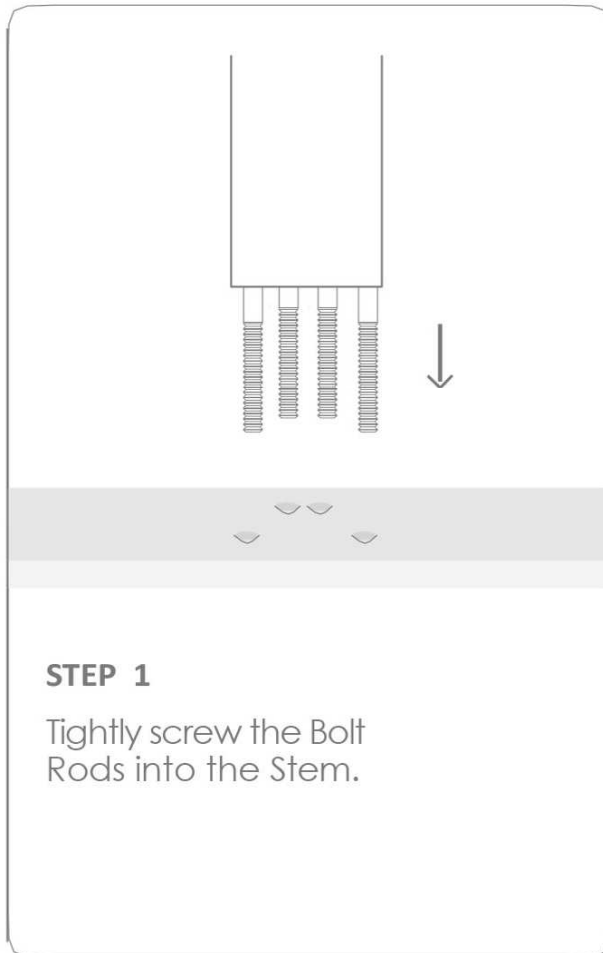   


BOX INCLUSIONS

 
OPTIONAL ROTATING BASE

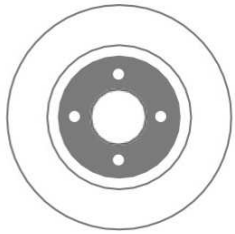


Base Rotate

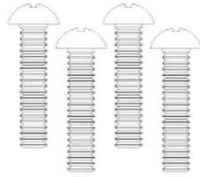 

4x Bolts

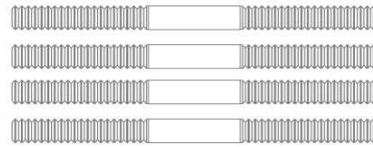 


4x Bolt Rods

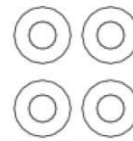 


4x Washers



 4x Nuts

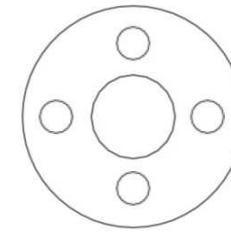


1x Mounting Washer

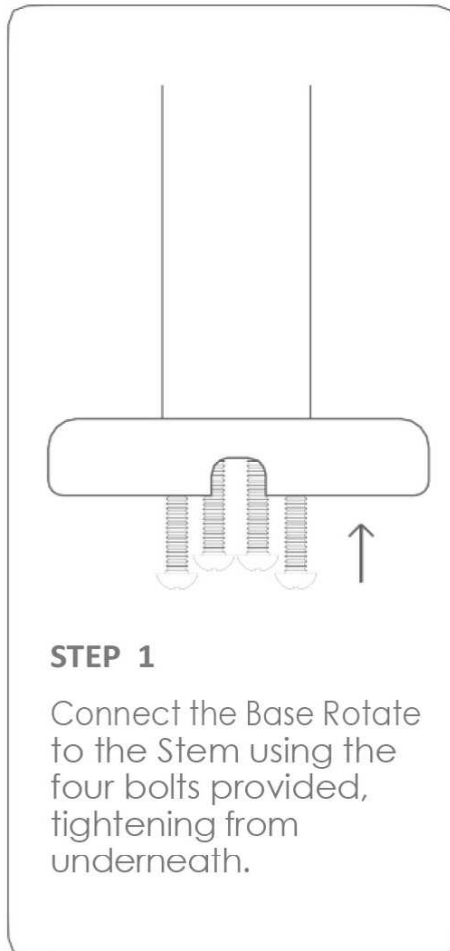 


STEP 1

 Connect the Base Rotate to the Stem using the four bolts provided, tightening from underneath.

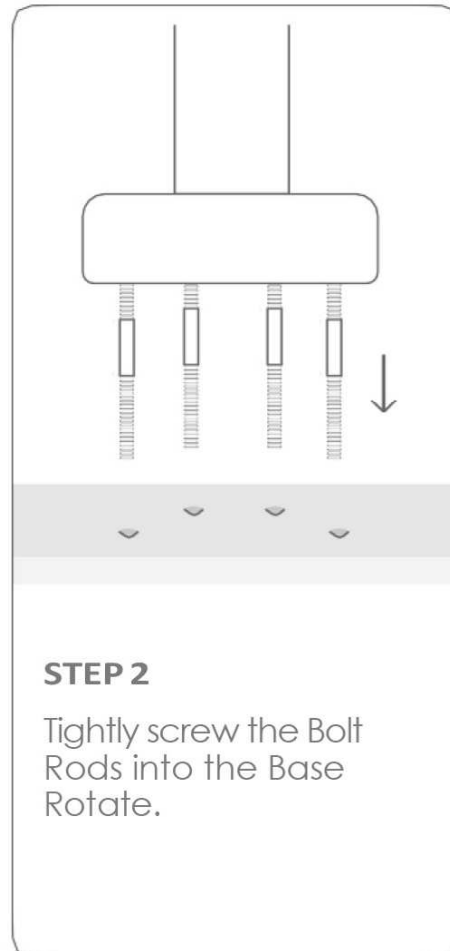

STEP 2

 Tightly screw the Bolt Rods into the Base Rotate.

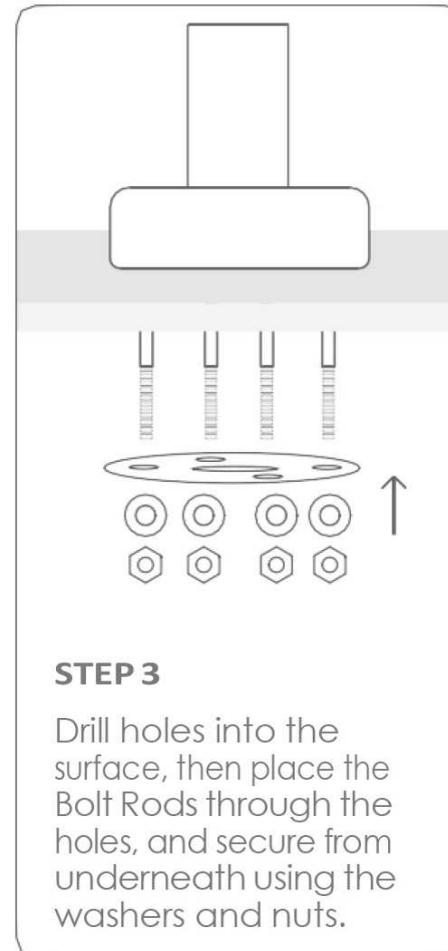

STEP 3

Drill holes into the surface, then place the Bolt Rods through the holes, and secure from underneath using the washers and nuts.

 


STEP 4


Complete and test by rotating your kiosk left and right (270 degrees).

BOX INCLUSIONS


OPTIONAL FREE-STANDING BASE

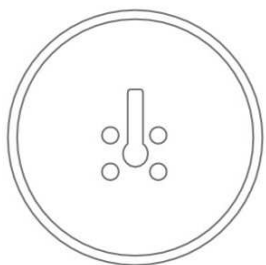


Base Freestanding

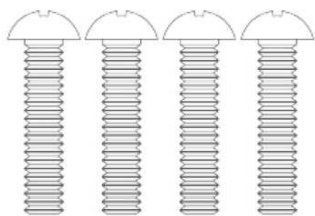 

4x bolts

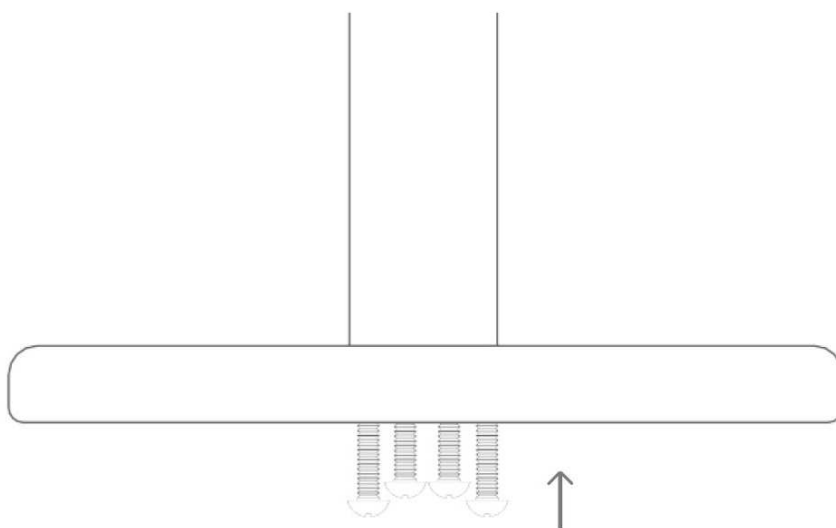 **STEP 1**

 Connect the Base Freestanding to the Stem using the four bolts provided, tightening from underneath.

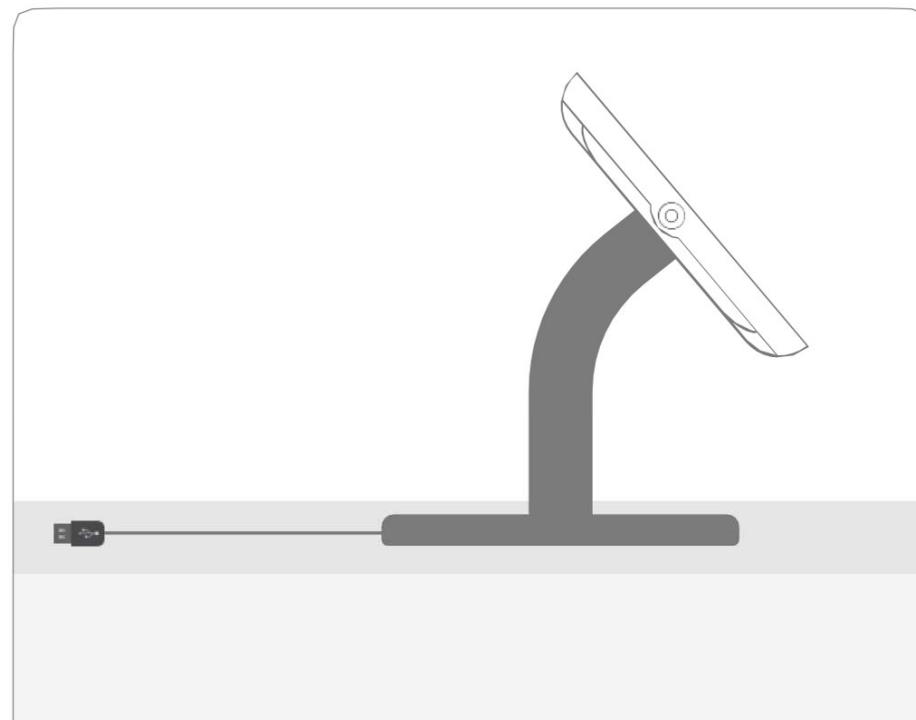**STEP 2**

Complete.

Also available...



Wall Kiosks



Floor Kiosks



For further
information
& support

Email
info@idisplay.ae

Phone
+971 4 884 28 52