


Gemini

Getting Started Guide

Follow this guide to set up your single
or double sided Gemini stand with
Elite, Touch or Edge holders.

Elite


Follow this guide to set up your Elite holder with the Gemini stand. Repeat steps for both front and back facing holders if needed.

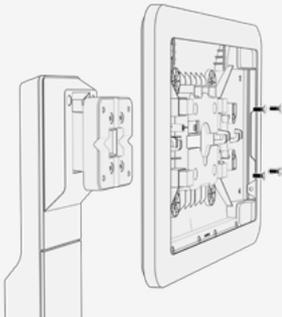


Step 1 Place Elite holder onto Gemini stand and screw in 4 screws to secure.




Step 2 Unlock holder with keys provided and remove faceplate.

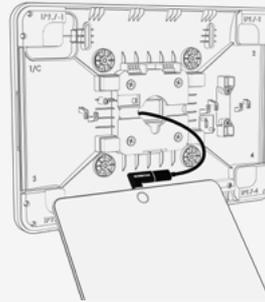

Step 3 Feed charging cable through the stand and plug in your tablet while placing it into the Elite holder.

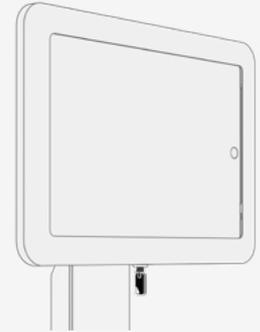


Step 4 Place faceplate back on and lock.

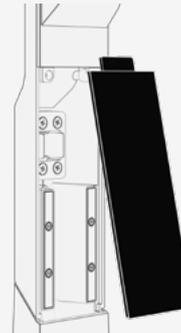


For power bank and PoE access, remove the magnetic panel for access to the cable channel.

Touch


Follow this guide to set up your Touch holder with the Gemini stand. Repeat steps for both front and back facing holders if needed.

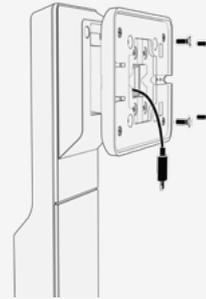

Step 3 Place Touch holder onto Gemini stand and screw in 4 screws to secure. Feed charging cable through the stand.

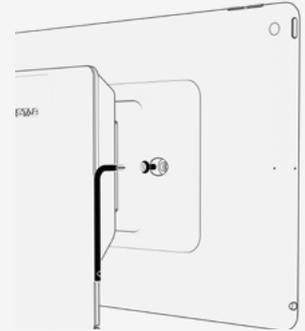


Step 4 Re-attach top bracket and secure with the lock screw. Plug in the charging cable.

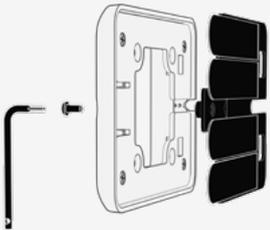

Step 1 Unscrew top bracket that holds the adhesive and separate.




Step 2 Peel off adhesive & place the bracket in the center of your tablet. Press & hold for 20 seconds.

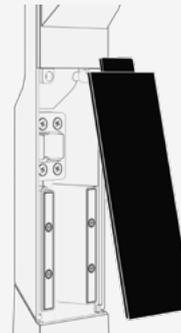


For power bank and PoE access, remove the magnetic panel for access to the cable channel.

Edge


Follow this guide to set up your Edge holder with the Gemini stand. Repeat steps for both front and back facing holders if needed.

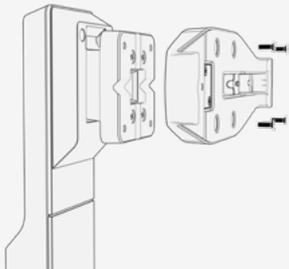


Step 1 Place Edge holder onto Gemini stand and screw in 4 screws to secure.

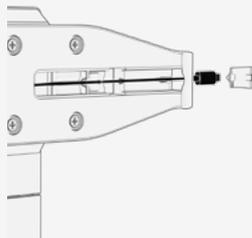


Step 2 Remove cable cover chip and feed charging cable through the stand.

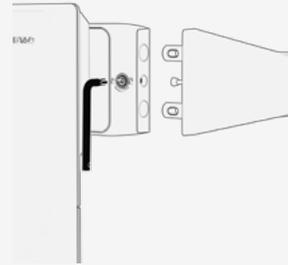


Step 3 Unlock the security lock with the L shape key and slide the clamp out.

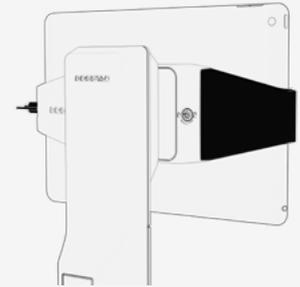

Step 4 Plug in the charging cable and squeeze the tablet into the clamp with the charging cable running behind the tablet. Re-attach clamp arm.

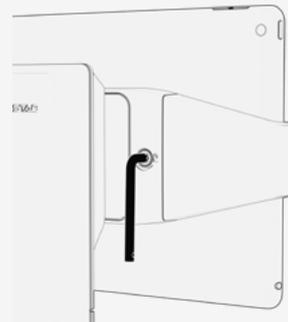

Step 5 Remain holding clamp together until you have rotated the security lock with the L shape key into the lock position.

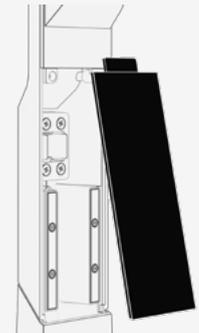

For power bank and PoE access, remove the magnetic panel for access to the cable channel.



US Customer Support

1800 293 9703

sales@bosstab.com

Australia Customer Support

1800 870 132

sales@bosstab.com.au

Warranty & Returns If you receive an item that is faulty or damaged then you can send it back for a refund, replacement or store credit and we'll pay for the return postage costs. We offer a 12 month warranty on items that are deemed defective by the manufacturer. If you have a defective product covered by this warranty, we will either repair using new or refurbished parts, or if repair is not possible, replace the item. The warranty will not cover loss or theft, nor damage deemed to be caused by misuse or unauthorized modification. To view our full returns policy and initiate a return please visit **www.bosstab.com**